

Get More Information

Visit Us Online

Visit us online to find additional information regarding your Royal grinder including:

- Cleaning information
- Warranty details
- Tips and tricks

www.flairespresso.com/brewguide

We want you to love your Royal grinder! Our team is standing by to help troubleshoot any issues that may arise.

If you need help, please contact us immediately at:

service@flairespresso.com

intactidea




28-B Hammond Street, 92618 USA
service@flairespresso.com • www.flairespresso.com
© Intact Idea, All Rights Reserved

Flair is a trademark of Intact Idea, LLC - Designed in California. Made in China.

**Quick
Start
Guide**

The **Royal Grinder**
by Flair Espresso

The Royal grinder consists of three major sections: (A) a detachable aluminium handle, (B) a precision-milled aluminum body, (C) and a detachable catch cup.

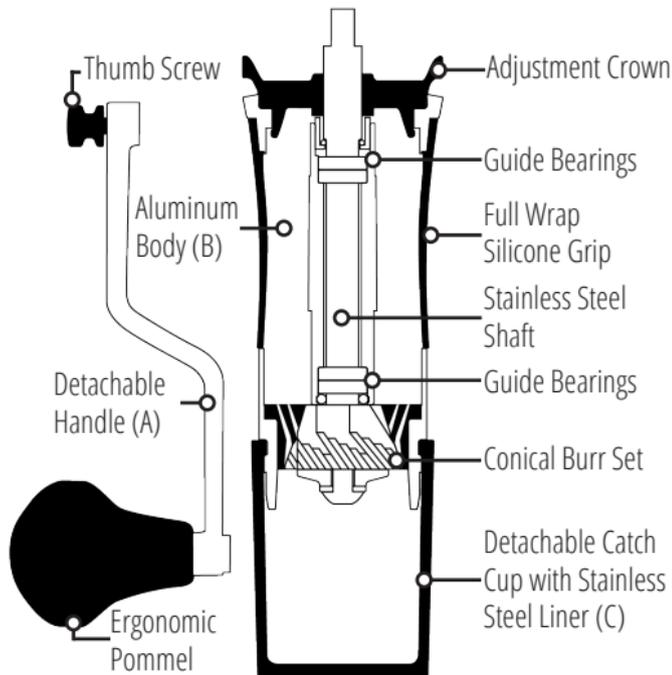

Adjusting Your Grind

Lift, Turn & Lock Adjustment Crown

Maximum Dose: 32 grams

Minimum Grind Adjustment: .02mm

1. **Lift** crown up until you “feel” a click and it is fully disengaged from the base.



2. **Turn** crown to adjust grind size.

⊕ Clockwise (increasing numbers) increases grind size.

⊖ Counter - Clockwise (decreasing numbers) Decreases grind size.



3. **Lock** grind adjustment by pushing crown down until it clicks into base.




Dialing-In Your Grind

Three full rotations & 72 individual adjustments

1st Rotation – Zero to 12 (24 settings)

2nd Rotation – 12.5 to 24 (24 settings)

3rd Rotation – 24.5 to 36 (24 settings)

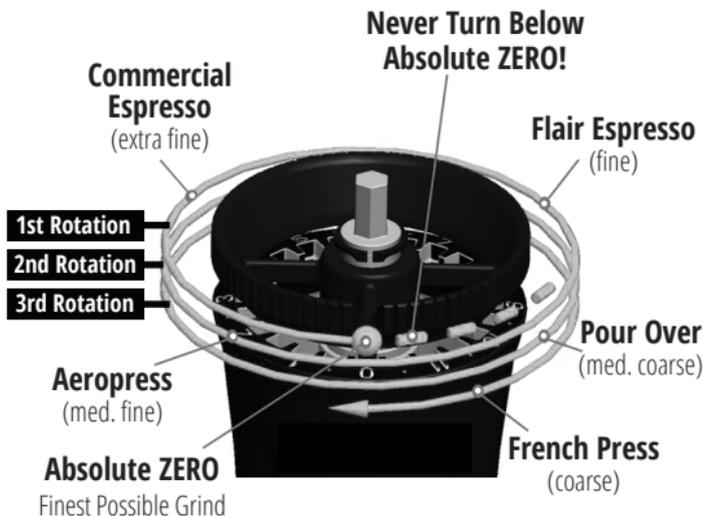

1st Rotation

2nd Rotation

3rd Rotation

Aeropress
(med. fine)

Absolute ZERO
Finest Possible Grind

**Never Turn Below
Absolute ZERO!**

**Commercial
Espresso**
(extra fine)

Flair Espresso
(fine)

Pour Over
(med. coarse)

French Press
(coarse)

NOTE:

Grind settings will vary based on brew method, desired dose, bean type and roast. Dial-in to your preferred taste.

