



HOW TO CONNECT TO CASH

*1 - SWITCH ON THE MACHINE HOLDING PRESSED THE 2 LONG COFFEES AND THE CONTINUOUS BUTTONS OF THE FIRST AND SECOND GROUP UNTIL YOU ENTER IN THE CASH MENU*

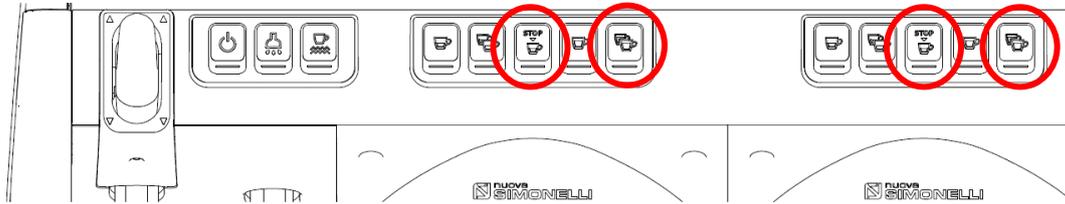


*2 - CHANGE SELECTION OF CASH AND CONFIRM BY PRESSING THE CONTINUOUS COFFEE BUTTON*


LED 1 SHORT COFFEE = NO CASH (STANDARD CONFIGURATION)

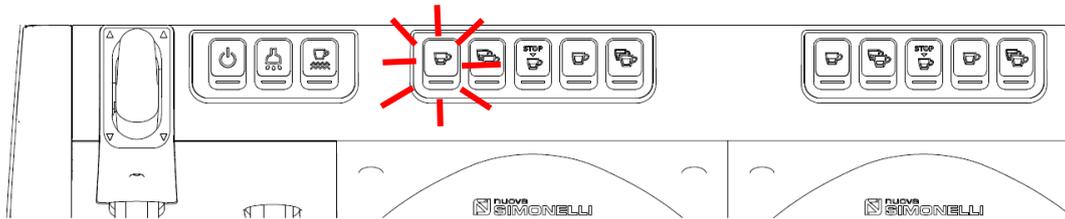

LED 2 SHORT COFFEE = CASH TIPOLOGY CSI-2

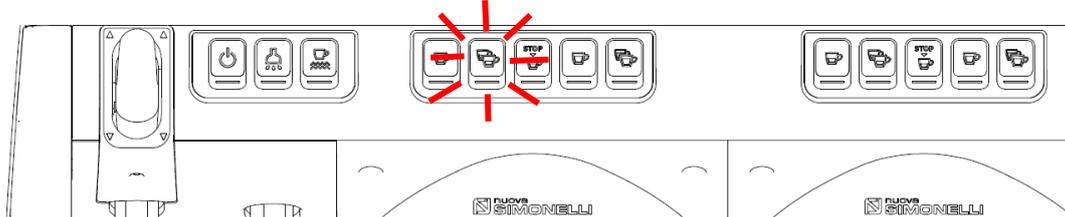

LED 1 LONG COFFEE = SERIAL CONNECTION (DIRECT CONNECTION)

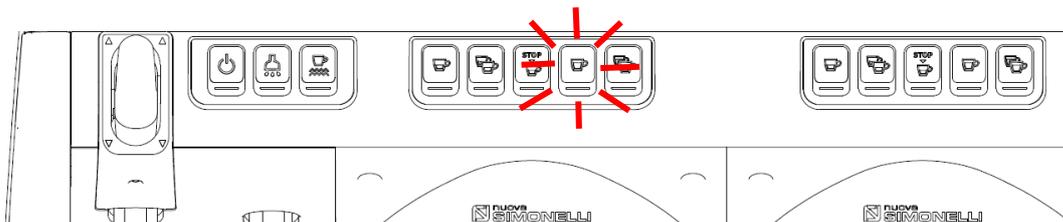

LED 2 LONG COFFEES = REMOTE CONNECTION

